

# Infiltrator™ Contractor Lifting Strap

June 2025

## Assembly Instructions

### BEFORE YOU BEGIN

Infiltrator Water Technologies' tanks must be installed according to state and/or local regulations and approvals, which supersede the manufacturer's installation instructions. If unsure of the installation requirements for a specific site, contact the health department or permitting authority. The Infiltrator Contractor Lifting Strap shall not be used on non-Infiltrator Water Technologies tanks.

### MATERIALS AND EQUIPMENT NEEDED

- ☐ (1) Heavy-Duty Lifting Chain
- ☐ (2) Heavy-Duty Hooks
- ☐ (1) Excavator

### PREPARING TO LIFT

**Note:** Infiltrator small tanks, including IM-540, IM-300, IM-550C, and GIT-540, only feature two lifting lugs on top of the tanks. Larger tanks, such as the IM-1060, CM-1060, GIT-1060, IM-1280C, IM-1250, IM-1530, GIT-1530, and IM-1760C, feature four lugs.

1. Begin by identifying lifting lugs located on the top of the tank and snap the Infiltrator Contractor Lifting Strap hooks to the lifting lugs. Only use two hooks suspended from the same pear ring of the Infiltrator Contractor Lifting Strap when installing one of Infiltrator's small tanks featuring two lifting lugs. Each of the four Infiltrator Contractor Lifting

Strap hooks should be snapped to one of the four lifting lugs when installing larger tanks.

2. Next, attach the Infiltrator Contractor Lifting Strap to a chain and hook on the excavator's bucket.

- a) For smaller tanks, attach the chain and hook directly to the pear ring closest to the two hooks used to snap to the tank's lifting ropes, thereby bypassing the black ballistic loops.
- b) For larger tanks, attach the black ballistic nylon loops to the chain and hook on the excavator's bucket. Note: if installing an Advanced Treatment Unit with weight unevenly distributed across the tank, attach the chain and hook through the loop closer to the heavier part of the tank (left or right).

**⚠ WARNING:** The Infiltrator Contractor Lifting Strap is only rated to lift a maximum weight of 750 lbs (340 kg). The Infiltrator Contractor Lifting Strap is intended for use **ONLY** with Infiltrator tanks and interceptors in accordance with designated instructions. Any other use of the Infiltrator Contractor Lifting Strap is prohibited. Infiltrator Water Technologies will not be liable for any problems that arise from unauthorized use of the Infiltrator Contractor Lifting Strap.